



MADE IN GERMANY

SEBO *essential* G-Series



ENGLISH

For Household Use Only

© Copyright SEBO America, LLC • All rights reserved.



SEBO *automatic* G Series Owner's Manual


Table of Contents

Technical Details	2
Wiring Diagram	2
Important Safety Instructions	3
Special SEBO Product Features	4
S-Class Filtration	4
Brush Roller Obstruction – Auto Shut-Off.....	4
Brush Roller Deterioration Warning	4
Stationary Use Warning.....	4
Bag Full or Clog Warning – Auto Shut-Off.....	4
Identification of Parts	5
Assembly	5
Optional Attachments	5
Standard Attachments	5
Operating Instructions	6
Starting the Machine	6
Operating Positions	6
Using the Attachment Tube, Hose & Attachments	7
The Display Panel	7
The Adjustment Wheel.....	7
Maintenance	8
Changing the Dust Bag	8
Changing the Micro-Hygiene Filter	8
Changing the Exhaust Filter.....	8
Changing the Brush Roller	8
Clog Removal	9
Clogs in the Airflow Pathway	9
Clogs in the Attachment Hose.....	9
Clogs in the Attachment Tube	9
Clogs in Entrance to Dust Bag	9
Clogs in the Swivel Neck	9
Trouble-Shooting Guide	10
G Series Filter Bag Housing and Handle Schematic and Part Numbers	11
G Series Base Schematic and Part Numbers	12
Warranty	13
How To Contact SEBO	13

Technical Details

Vacuum motor	1300 watts (10.8 amps)
Water lift (at motor)	92.5 in. H ₂ O
Airflow (at motor)	103.8 CFM
Filter bag capacity	1.4 gal.
Sound level	69 dBA
Body weight	G1-16.9 lbs / G2-17.1 lbs
Motor protection	electronic cut-out
Working width	G1-12 inches / G2-15 inches
Brush drive	toothed belt
Brush speed	3100 rpm
Floor adjustment	manual
Cord length	40 feet
Radio suppression	EN 55014 Verf. 242/91

Wiring Diagram

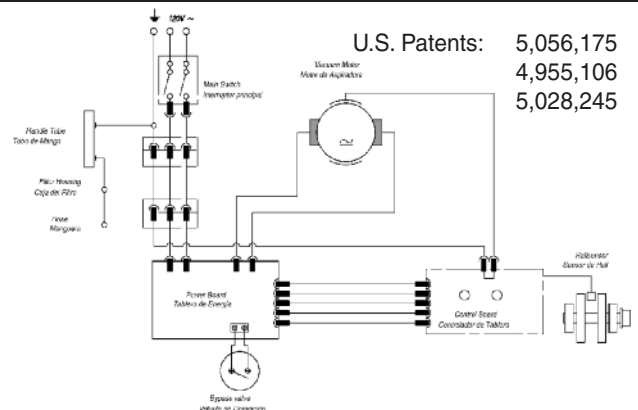



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE

When using an electrical appliance, basic precautions must always be followed.

To reduce the risk of electric shock, this vacuum cleaner has a polarized plug; one blade is wider than the other. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way. Connect only to the outlet type specified on the serial number plate underneath the machine.

SAVE THESE INSTRUCTIONS.

WARNING: To reduce the risk of fire, electric shock, or injury:



1. Do not leave vacuum while plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not use near small children or pets. Do not allow to be used as a toy. Use of this product by children should always be supervised by an adult.
4. Use only as described in this manual. Use only manufacturer-recommended attachments.
5. Do not use with a damaged cord or plug. If vacuum is not working as it should, has been dropped, damaged, left out-doors, or dropped into water, take it to a SEBO service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug – not the cord.
8. Do not plug in if switch is in the “I” (ON) position.
9. Do not use outlets above counters to plug in vacuum – damage to items in the surrounding area could occur.
10. Always carry the vacuum over steps and sills.
11. Do not handle plug or vacuum handle with wet hands.
12. Do not put any object into vacuum openings. Do not use machine with any openings blocked. Keep openings free of lint, hair, and anything that may reduce air flow.
13. Do not re-use filter (dust) bags or wash the filters.
14. Do not remove any screws from vacuum.
15. Do not vacuum up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
16. Do not use vacuum without dust bag and/or filters in place.
17. Turn off all machine controls before unplugging.
18. Use extra care when cleaning on stairs.
19. Do not use machine to vacuum up flammable or combustible liquids such as gasoline or use in areas where they may be present.
20. Machines can cause a fire when operated near flammable vapors or materials. Do not operate this vacuum near flammable fluids, dust or vapors.
21. Maintenance and repairs must be done by qualified personnel.
22. Use only original SEBO replacement parts.
23. Do not use vacuum as a step.
24. If vacuum is used on plush carpet or carpet with thick padding, do not leave machine standing in one place with machine turned on.
25. Do not use the operator’s handle, which inserts into the top of the dust bag housing, to carry the machine. The carrying handle is located on the backside of the machine’s bag housing.
26. Keep hair, loose clothing, fingers, and all parts of body away from vacuum openings and moving parts. Do not place fingers or other body parts under vacuum unless it is unplugged.
27. Do not place the power head over rug or carpet edges.
28. The vacuum has a manual reset thermal protector. The protector is reset by switching off the vacuum. The thermal protector needs some time to cool down after switching off! Check the vacuum for air blockages or mechanical failures before switching on.
29. Store the vacuum in a dry place at room temperature. When the vacuum is not in use, you should wrap the cord on the cable hooks.
30. Any other servicing should be performed by an authorized service representative.



SPECIAL SEBO PRODUCT FEATURES


Your SEBO *essential* G series vacuum cleaner is the most technically advanced upright vacuum cleaner in the world. Along with its excellent filtration system (99.9% to 0.3 microns), the machine has warning systems and automatic shut-off capabilities that are designed to alert the user to machine problems that, if ignored, will damage the machine or diminish performance. Some of your SEBO *essential*'s most unique features are:

1. **S-Class Filtration.** Certified by leading Allergy foundations in Europe, the *essential* G-Series vacuum provides the user with S-Class filtration of 99.9% of particles to 0.3 microns. This is accomplished by the SEBO three-step filtration system. First, the three-layer full-size filter bag (a) collects the vast majority of the debris. Then, the remainder of the particles are collected by the hospital-grade microfilter (b). Finally, the micro-exhaust filter (c) cleans the exhaust air that the vacuum emits. SEBO's unwavering attention to the complete sealing of the machine ensures no dust or dirt escapes around the microfilters. If the microfilters are changed regularly (every 10-20 bags), the *essential* G is perfect for allergy or asthma sufferers.
2. **Brush Roller Obstruction – Auto Shut-Off.** If the brush roller is obstructed, the machine will shut off in 3 seconds and the red “CHECK BRUSH” light located on top of the power head will flash. The user should turn the switch off, unplug the machine and immediately remove the obstruction. If the user restarts the machine without removing the obstruction, the machine will again shut off in 3 seconds and the “CHECK BRUSH” light will flash.
3. **Brush Roller Deterioration Warning.** If the red “CHECK BRUSH” light is illuminated continuously while the head is in position 1 (after a 10 second delay) it is signalling the user that the brush roller is too worn and, therefore, should be replaced. The light will remain illuminated until the worn brush roller is replaced, but the machine will continue to operate in the meantime.
4. **Stationary Use Warning.** When the machine has its handle in the upright-locked position, it is designed to disengage the brush roller from the floor by raising the height of the power head. If the power head is in position 1 (the highest setting) but is still engaged in the carpet, the “CHECK BRUSH” light will slowly flash to alert the user. This can occur on extremely high-nap carpet, such as loose-pile shag, or on carpets with extraordinarily thick padding underneath. However, it is typically caused by the user pulling forward on the machine while using the attachment hose or active wand. This feature was designed to be an alert to the user to “take care” while the machine is stationary. An operating machine should not stand stationary on the floor for inappropriate periods of time.
5. **Bag Full or Clog Warning – Auto Shut-Off.** If the vacuum's air flow pathway becomes restricted due to a full bag or the existence of a clog, the red “BAG FULL OR CLOG” light located on top of the power head will illuminate. If the user ignores this warning for approximately 30 seconds, the machine will shut off and the “BAG FULL OR CLOG” light will flash. The user should turn the switch off, unplug the machine and immediately insert a new bag or remove the clog (to remove a clog, refer to the Clog Removal section on page 9). If the user restarts the machine without having solved the problem, the “BAG FULL OR CLOG” light will again illuminate and the machine will shut off in 30 seconds.

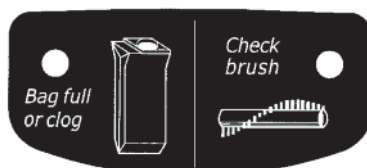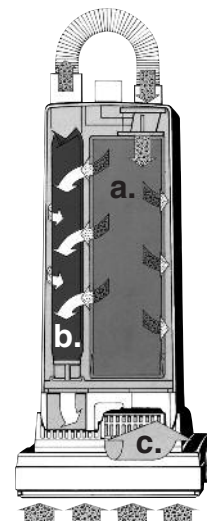


The control panel is located on the power head.

Identification of Parts

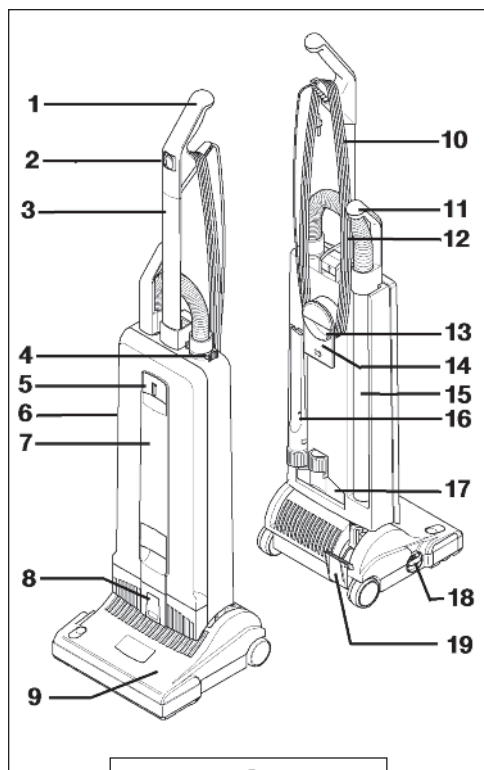

1. Handle grip
2. On/Off switch
3. Handle assembly
4. Retaining ring
5. Cover release flap
6. Dust bag housing
7. Front cover
8. Housing release button
9. Power head with brush
10. Cable (cord)
11. Attachment tube handle
12. Attachment hose
13. Carrying handle


14. Cable (cord) hook
15. Attachment tube (active wand)
16. Crevice nozzle
17. Upholstery nozzle
18. Pile adjustment knob
19. Foot pedal
20. Swivel neck
21. Support lever
22. Handle release catch
23. Projection tab
24. Connecting tube
25. Dusting brush clamp

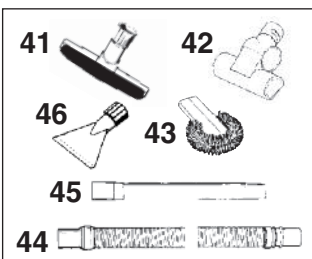

Optional Attachments

41. Wall and floor brush - Part # 1325 HG
42. Turbo brush for stairs - Part # 6179 AM
43. Radiator brush - Part # 1496 HG
44. Extension hose (9'3") - Part # 1495 AM
45. Straight tube - Part # 1084 HG
46. Flat upholstery nozzle - Part # 1090 HG

Also available for odor control - the combined micro/charcoal filter - Part # 5425 AM

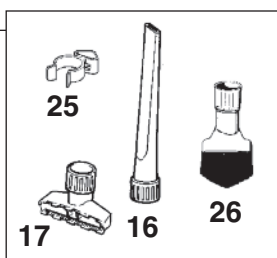

Standard Attachments

16. Crevice nozzle
17. Upholstery nozzle
25. Dusting brush clamp
26. Dusting brush

Assembly



Place the power head (9) on the floor with the swivel neck (20) and the support lever (21) upright. Hold the dust bag housing (6) vertically and place it over the swivel neck and support lever. Push firmly and **evenly** down so that the housing release button (8) snaps outward to its "locked" position.

Slide the dusting brush clamp (25) onto the handle tube (3) and tighten the screw. The handle of the dusting brush (26) will now snap into the clamp.

To insert the handle tube (3) into the housing, lift the catch (22), slide the handle in, making sure that the handle is all the way in and cannot go any further. Push the catch (22) down to lock handle in place. If the handle is not pushed fully down, the vacuum will not work.

Push the black end of the attachment hose (12) into the connecting tube (24) so that it clicks into place. Insert the attachment tube (15) into the swivel neck and push the handle (11) over the projection tab (23).

Insert crevice nozzle (16) and upholstery nozzle (17) into the recesses in the back of the machine.

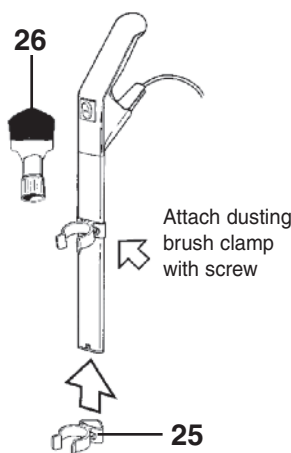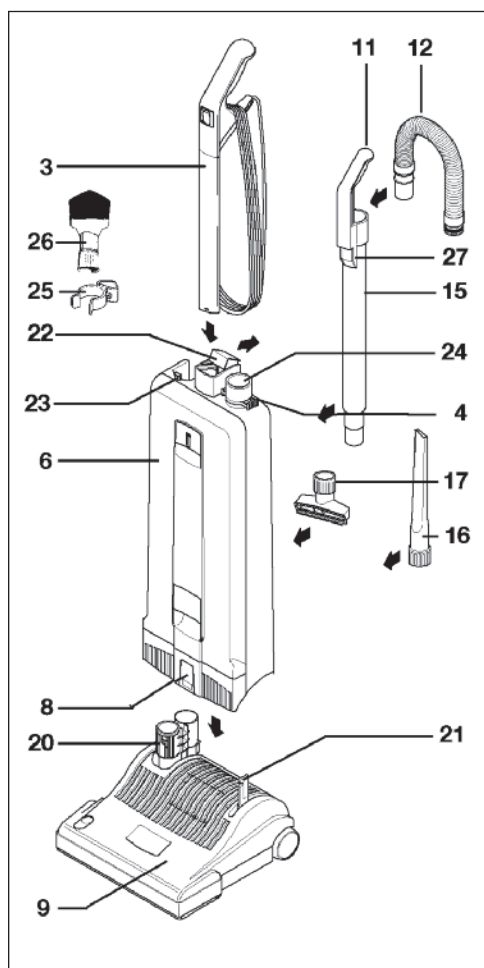

Note

All illustrations shown in this manual represent the G1 model except where part numbers and instructions are different for each model. In those instances, illustrations for both the G1 and G2 will be shown.

Operating Instructions

Starting The Machine - *Figures 1 & 2*

A. Before turning on your vacuum cleaner, make sure that the vacuum handle is in its upright locked position and that you have a firm hold on the handle grip to keep the machine from moving forward.

1. Turn the quick release cable hook (14) to the up position by moving it to the left or right (figure 1).
2. Release the power cord plug from the power cord and lift the cord off of the upper cord hook (27 - figure 2).
3. With the switch (2) in the "O" (OFF) position (figure 2), plug the polarized power cord into a 120 volt outlet located near the floor.

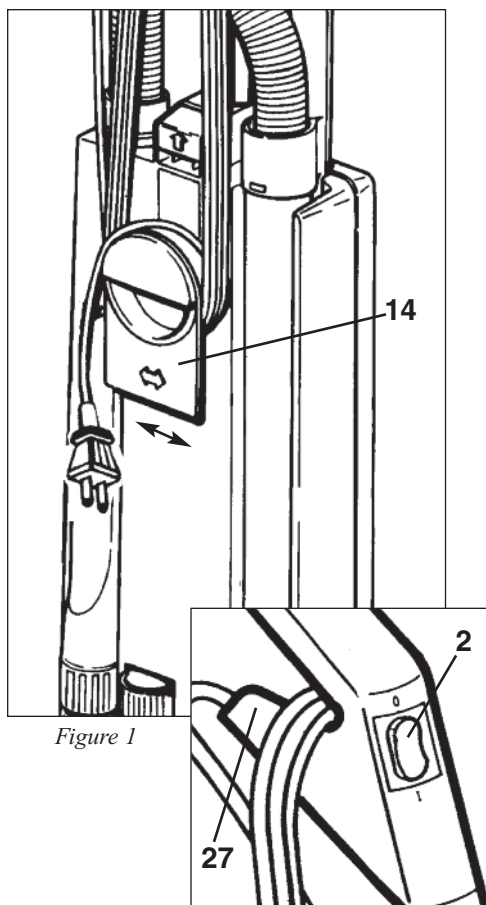


Figure 1

Figure 2

Switch Position

O = OFF

I = ON

Operating Positions - *Figure 3*

B. When the machine is switched on with the handle in the upright locked position (see **A** above), the power head and brush automatically rise from the carpet. To release the machine from the upright locked position, press down on the foot pedal (19) and lower the handle into the normal operating position. The brush will automatically lower.

The handle can be lowered to an intermediate stop position in order to lift up the brush head for maneuvering over rugs, etc. To lower the handle to a horizontal position useful for vacuuming under beds, the foot pedal must be pressed a second time. The intermediate stop position can be closed off by the orange-colored slider (28) on the back of the swivel neck (20), so that the handle will go from vertical to horizontal in one movement.

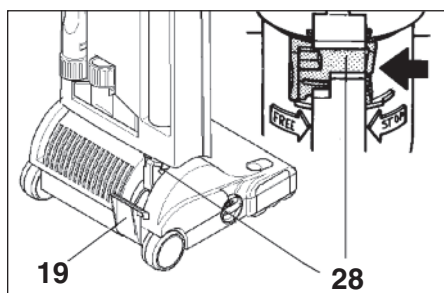


Figure 3



WARNING! The quality, condition, coating, texture, age and manufacturing technique of all floor surfaces vary. Therefore, upright vacuums with rotating brushes, including your SEBO, may damage some floor coverings or surfaces. Some types of high-gloss hardwood floors, cushion vinyl, berber carpets, long shag, and delicate or hand-woven carpets are particularly vulnerable to damage by rotating brushes. When possible, consult the materials supplied by your floor's manufacturer for information on proper upkeep and cleaning. **To ensure that your new SEBO vacuum cleaner is compatible with your floor, please test the vacuum cleaner on each type of flooring surface in a small inconspicuous area to determine if any damage occurs. If damage occurs, stop using the vacuum cleaner immediately!**

Care must be taken to ensure that the bottom of the machine does not contact the floor. If this happens, damage to the floor could occur. If damage occurs, stop using the vacuum cleaner immediately!

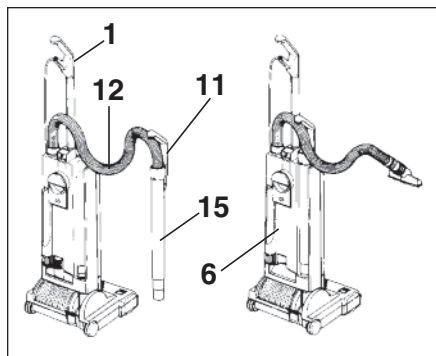


Figure 4

Figure 5

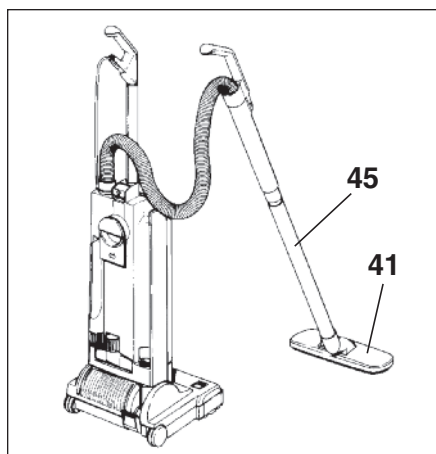


Figure 6

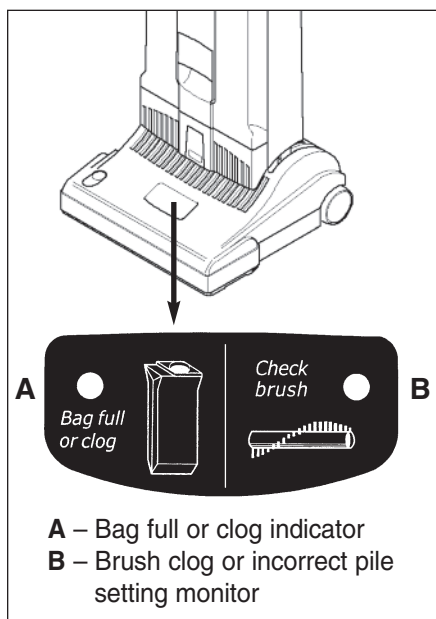


Figure 7

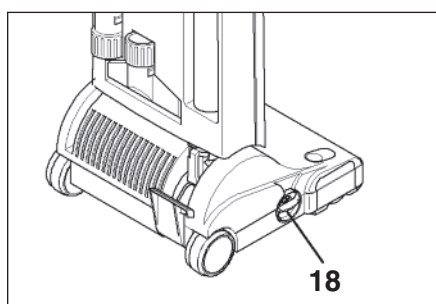


Figure 8

Using the Attachment Tube, Hose & Attachments - Figures 4, 5 & 6

The attachment tube (15) is useful for vacuuming corners and hard-to-reach areas. The handle grip (1) should be in the upright, locked position (**as shown in figure 1**). Grip the attachment tube handle (11), pull it up and away from the machine and stretch out the hose (12) until it locks to the back of the tube (this locking action will prevent the hose from retracting back into the attachment tube while it is in use). Various attachments may be inserted onto the end of the tube. After use, remove attachment and re-insert the attachment tube into the back of the machine. **Be sure that the attachment tube handle (11) is inserted over the projection tab (see #23, page 5)**. If the attachment tube handle is properly seated over the projection tab, the hose will automatically retract and you may resume vacuuming. There is no need to turn off the vacuum while switching from upright vacuuming to using the attachment tube or hose.

To use the hose without the attachment tube (**as shown in figure 2**), pull the hose out of the attachment tube while the tube is still attached to the machine and **securely seated over the projection tab (23)**. Insert an attachment tool, if desired, onto the end of the flexible hose. You may also release the hose while the attachment tube is disengaged from the machine by pressing the release button (2) at the base of the handle (11).

While using attachment tools, if the the power head brush roller is not able to disengage from the floor surface, you may keep the brush roller off the carpet by placing the handle (1) in its upright locked position and lowering the handle with one hand to raise the brush roller off of the floor. Operate attachment accessories with the other hand. Or, with the handle in the upright locked position, the machine may be tipped backward so that it rests on the back side of the bag housing (6), and the power head is locked in a perpendicular position to the floor.

To vacuum walls, under beds, or higher-reach areas, etc., the SEBO *essential* G can be fitted with an additional straight tube (45) and the wall and floor brush (41). The machine will then perform as a canister vacuum (**as shown in figure 3**).

The Display Panel - Figure 7

Red light	(A): Off – Operation of machine is normal
Red light	(A): Continuous – change bag or clear clog in the hose or power head.
Red light	(A): Flashing and motor off – dust bag is full, or clog in the hose or power head due to ignoring the continuous red warning light for full bag or clog (see above)
Red light	(B): Off – Operation of brush is normal
Red light	(B): Continuous while in position 1 on the pile adjustment knob (18) – brush is worn - change brush roller
Red light	(B): Continuous while in positions 1-4 – incorrect brush setting- adjust the brush by turning the pile adjustment knob (18) to a higher or lower position
Red light	(B): Flashing and motor switched off – clogged brush
Red light	(B): Flashing and motor switched off with no blockage – raise brush to a higher position

For additional information on the display panel, see page 4

The Adjustment Wheel - Figure 8

The pile adjustment wheel (18) has 4 brush height settings. Setting 1 is the lowest brush setting and setting 4 is the highest brush setting. When starting the vacuum, always start with the knob set at 4, then lower knob settings until the brush reaches the proper height. The red brush light on the display panel will light after 6 seconds if the brush is too high. Adjust the knob down. If after 6 seconds, the brush light stays unlit, the brush is at the proper setting for the pile. The red brush light will also illuminate if the setting is too low. Adjust the knob up until the light stays unlit after 6 seconds.

Maintenance



Always unplug vacuum from outlet before dismantling any part of the machine!

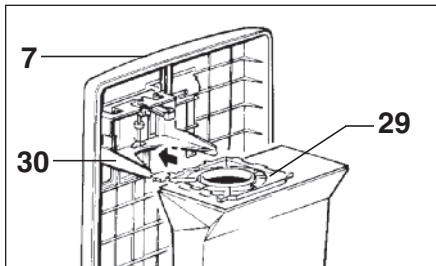


Figure 9



Changing the Dust Bag - Figure 9

To change the dust bag, pull the cover release flap forward (#5 on page 5) and lift the cover (7) from the dust bag housing. **The cover release flap must remain in a forward “pulled-out” position to change dust bags and lock them into place.** Squeeze the clamps on both sides of the dust bag sealing plate (29), slide the plate from the holder (30) and push the cap on to seal the bag. Slide the sealing plate (29) of a new bag into the holder and push it in firmly. Re-insert cover into dust bag housing, push it forward, then lock it in place by pushing down the cover release flap. You may find it convenient to store the bag cap inside the dust bag housing below the dust bag.

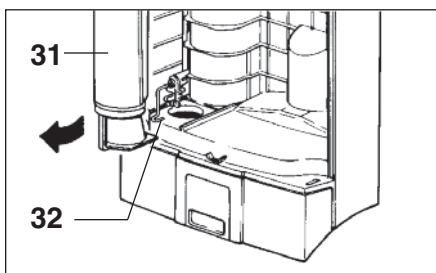


Figure 10



Changing the Micro-Hygiene Filter - Figure 10

The micro-hygiene filter (31) needs to be changed when it becomes extremely dirty or clogged with dust, or after approximately 20 dust bags have been used. To change the micro-hygiene filter, pull the cover release flap (#5 on page 5) forward and lift the cover (7) from the dust bag housing. Then, slide the filter out at the bottom. To replace, lift the safety lever (32) and slide the new filter in using the tracks as guides.

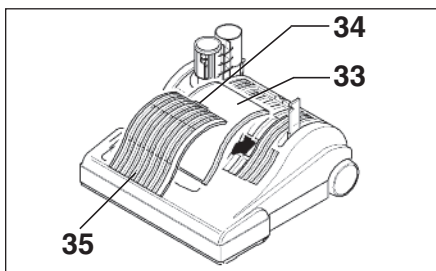


Figure 11



Changing the Exhaust Filter - Figure 11

After 20 bags have been used, change the exhaust filter (33). Remove the dust bag housing (6) from the power head by pressing the housing release button (8). To remove the exhaust filter, push the catch (34) and remove the filter cover (35) and exhaust filter. Insert the new filter, replace the filter cover then insert the dust bag housing back into the power head.


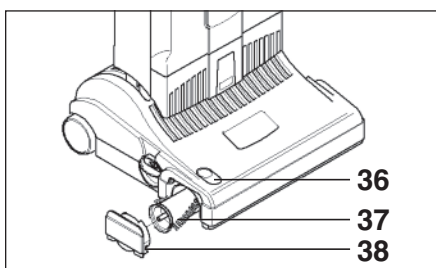


Figure 12

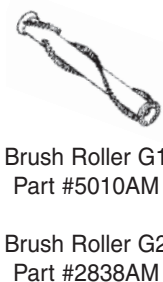

Brush Roller G2
Part #2838AM

Changing the Brush Roller - Figure 12

To change the brush roller (37), push the button (36), remove the side plate (38), turn the brush clockwise a quarter of a turn, and pull the old brush roller out. Slide the new brush roller into the brush housing and turn it until it locks into position. While slightly pushing the button (36), press the side plate (38) back into the locked position.

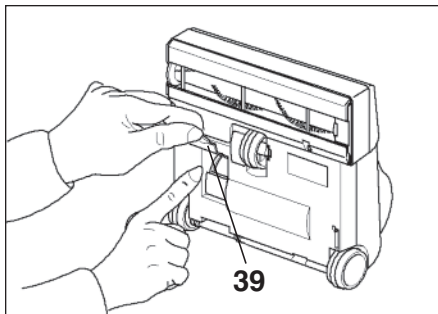


Figure 13

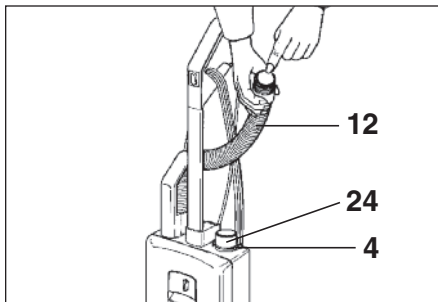


Figure 14

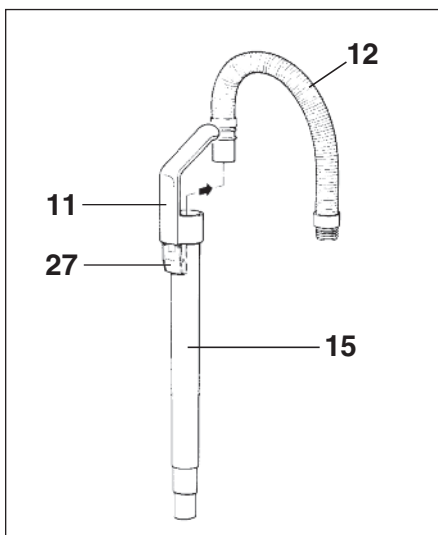


Figure 15

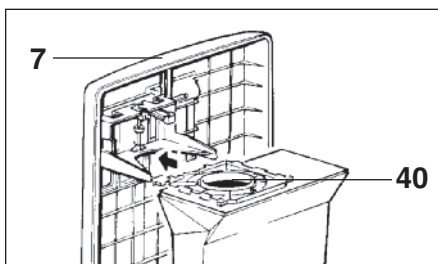


Figure 16

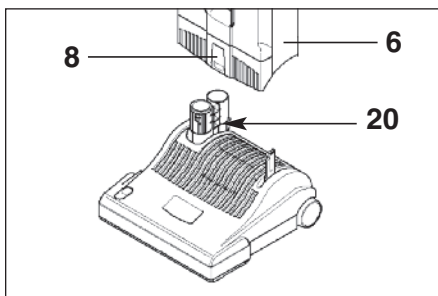


Figure 17

Clog Removal



Always unplug vacuum from outlet before removing any clogs!

Clogs in the Airflow Pathway - Figure 13

Most clogs can be removed by accessing the airflow pathway via the orange colored access door (39) located on the underside of the power head. However, other clogs may only be removed by accessing the airflow pathway by disassembling the machine in the opposite sequence of the machine's original assembly (see assembly, page 5).

Clogs in the Attachment Hose - Figure 14

Blockages in the hose can be cleared by removing the attachment hose (12) from the machine by squeezing the retaining ring (4) and inserting the opposite end of the hose in the connecting tube (24). Hold the hose upright with one hand blocking the top end and switch on the machine. If necessary, quickly lift your hand on and off the end of the hose. If this procedure does not clear the clog, a straight wire can be inserted into the hose to push out the clog. Take care not to puncture the hose with the wire.

Clogs in the Attachment Tube (Active Wand) - Figure 15

Remove attachment hose (12) from the attachment tube (15) by pressing the hose release button (27). Then, grip attachment tube handle (11) and remove tube from the machine. A straight wire can be inserted into the tube to push out the clog.

Clogs in Entrance to Dust Bag - Figure 16

Remove attachment hose (12) from vacuum cleaner (see figure 14) and remove front cover (7). Clean out connecting tube (24) and/or entrance to bag (40).

Clogs in the Swivel Neck - Figure 17

Clogs in the swivel neck (20) can be removed by first pressing the housing release button (8) and lifting off the dust bag housing (6). Lift upward firmly and evenly to properly remove the dust bag housing. Then, release the foot pedal (19), lower the swivel neck, check inside the swivel neck channel closest to the foot pedal (see arrow), and clean out pathway.

Trouble-Shooting Guide



Always unplug vacuum from outlet before dismantling any part of the machine!


PROBLEM	REASON	SOLUTION
Does not turn on or machine shuts off intermittently	1. Handle not fully inserted into the bag housing, causing a faulty connection.	1. Release handle catch, push handle down, close handle catch.
	2. Not plugged into good outlet.	2. Use another outlet.
	3. Cable worn.	3. Replace cable.
	4. Dust bag housing (6) not seated fully into proper "locked" position on top of power head.	4. Housing release button (8) should be snapped outward to its locked position.
Bag full or clog light on or flashing & machine shuts off (red light A see page 7, figure 7)	1. Bag full.	1. Replace bag. See #5 on page 4.
	2. Clog in airflow pathway, attachment hose, attachment tube, swivel neck or entrance to dust bag.	2. See Clog Removal on page 9. Also, see #5 on page 4.
	3. Microfilter dirty.	3. Replace microfilter.
Brush light on (red light B see page 7, figure 7)	1. Brush worn.	1. Replace brush. See #3 on page 4.
	2. Incorrect brush setting	2. Adjust the brush by turning the pile adjustment knob up or down.
Brush light slowly flashing (red light B)	1. Vacuum is stationary and in upright locked position.	1. See #4 on page 4.
Brush light flashing & machine shuts off (red light B)	1. Brush jammed or clogged.	1. Clear jam. See #2 on page 4.
	2. Brush is too low for the surface being vacuumed.	2. Raise the brush by turning the pile adjustment knob up.
Does not pick up	1. Attachment tube not correctly inserted.	1. Reinsert attachment tube, making sure lower end of tube is in the lower hole and handle is properly seated over the projection tab (23).
	2. Front cover not closed.	2. See below.
Front bag door won't fully close	1. Cover release flap not fully closed.	1. Reinsert bag. Lock the cover release flap down firmly.
	2. Bag not inserted properly	2. Reinsert bag with cover release flap (5) up, until firmly latched in bag holder (see pg. 8, figure 9).
	3. Microfilter not properly inserted.	3. Lift safety lever and insert filter with vertical plastic ridge on filter facing you (see pg. 8, figure 10).
Hose doesn't retract after attachment tube is inserted	1. Attachment tube not properly inserted.	1. Reinsert making sure top of handle is pointing back and tube is fully seated on the protruding tab (23) on top of the dust bag housing.

SEBO ESSENTIAL G1 / G2

Bag Housing with Handle

#9591AT G1 - Teal/Light Gray
#9591AM G1 - Light Gray/Dark Gray

#9592AT G2 - Teal/Light Gray
#9592AM G2 - Light Gray/Dark Gray

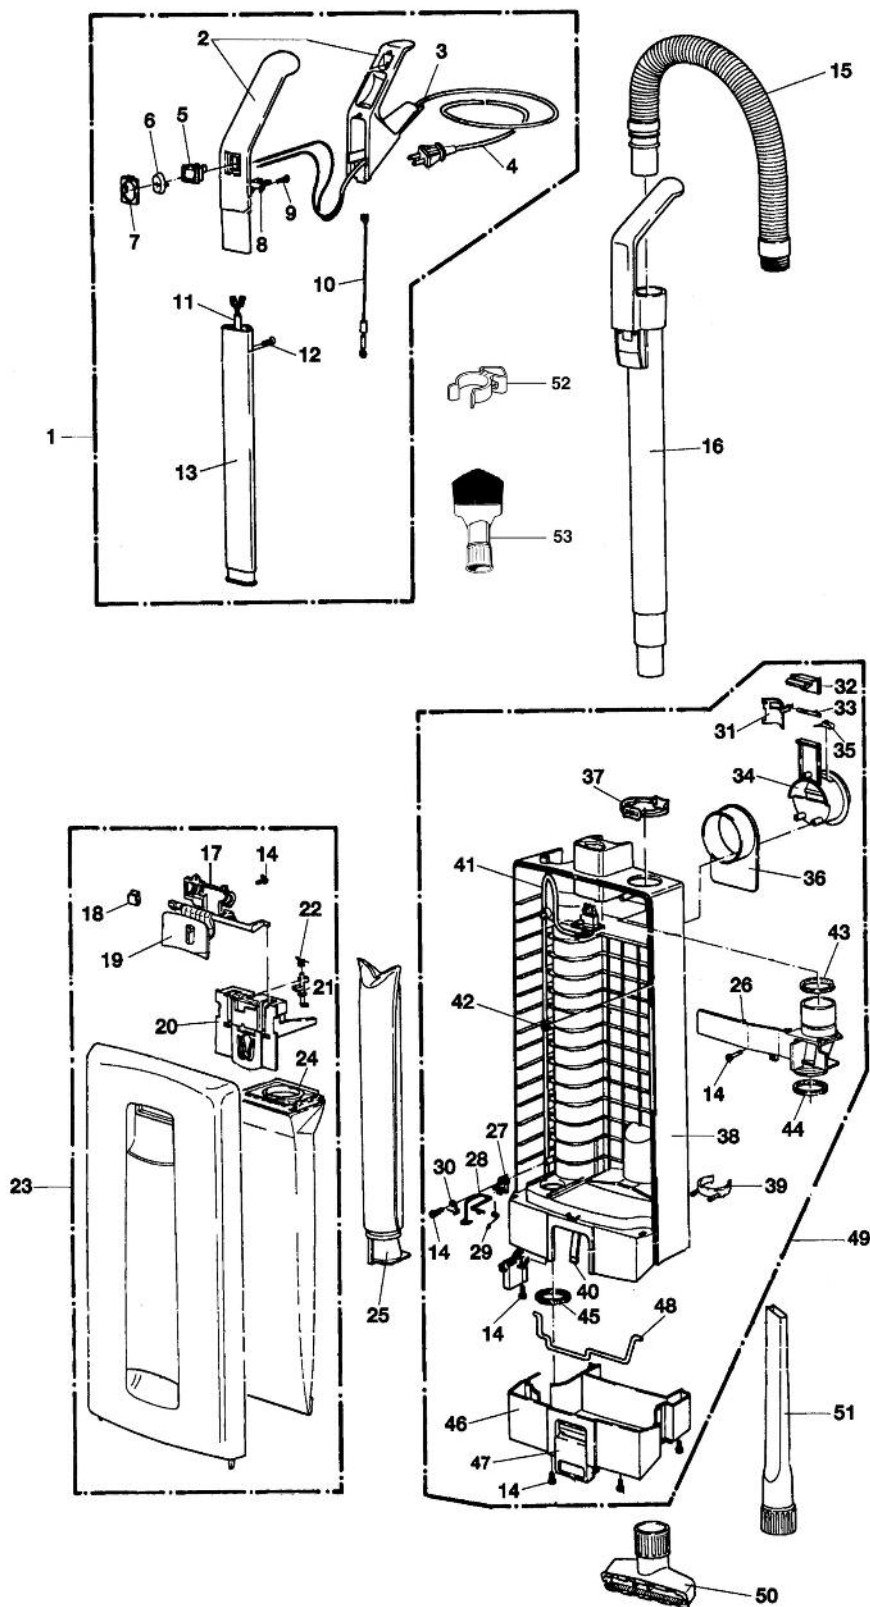

#9591AT G1 and #9592AT G2 Teal/Light Gray Machines

Pos.	Part #	Description
1	5624 AT	Handle with cable, teal, complete
2	5296 ES	Handle grip (incl. pos. 3, 7 & 10)
3	5359 HG	Grommet
4	5450 DG	Power supply cord
5	05113	Switch
6	5160 TK	Switch cap - teal
7	5161 HG	Switch cap holder - light gray
8	5162	Cable clamp
9	0103	Screw C 3.9 x 16
10	5253 UL	Antistatic-wire, cpl.
11	5298 ER	Handle cable
12	0129	Screw, M4 x 12
13	5187	Handle tube
14	0102	Screw F 3.9 x 13
15	5040 HG	Hose, complete
16	5045 HG	Extension tube
17	5803 HG	Cover
18	5319	Bag holder spring
19	5706 TK	Cover release - teal
20	5324	Bag holder, complete (incl. pos. 21 & 22)
21	5360	Safety catch
22	5091	Safety catch spring
23	5805 TK	Front cover, complete - gray/teal
24	5093 AM	Filter bag
25	5036 AM	Micro hygiene filter
26	5380 HG	Internal cover, complete (incl. pos. 43 & 44)
27	5164	Cable clamp
28	5208	Filter safety catch
29	5210	Return spring
30	1073	Clamp
31	5099	Handle lock plate
32	5098 HG	Lock catch
33	0187	Lock pin 4 x 33.5
34	5145 HG	Carrying handle
35	5146	Stop spring
36	5144 HG	Cable hook
37	5424 DG	Retaining ring
38	5280 HG	Dust bag housing
39	1823 HG	Attachment clip
40	5084	Spring for locking rod
41	5299 ER	Internal cable
42	5266	Cable clamp
43	5842	Seal
44	5289	Seal
45	5163	Seal
46	5085 HG	Dust bag housing bumper base
47	5082TK	Dust bag housing locking catch - teal
48	5083	Locking rod
49	5214 AT	Dust bag housing - light gray/teal
50	1491 JE	Upholstery nozzle - light gray
51	1092 JE	Crevice nozzle - light gray
52	5460 DG	Mounting clip with screw - dark gray
53	1329 DG	Dusting brush

#9591AM G1


Light Gray/Dark Gray Machine Exceptions

1	5624 AM	Handle with cable, complete
6	5160 DG	Switch cap - dark gray
7	5161 DG	Switch cap holder - dark gray
16	5045 DG	Extension tube - dark gray
19	5706 DG	Cover release - dark gray
23	5805 SE	Front cover, cpl. - light gray/dark gray
47	5082 DG	Lock button - dark gray
49	5214 HG	Dust bag housing, complete - light gray
50	1491 DG	Upholstery nozzle - dark gray
51	1092 DG	Crevice nozzle - dark gray

SEBO ESSENTIAL G1

Power Head

#9591AT G1 - Teal/Light Gray
 #9591AM G1 - Light Gray/Dark Gray

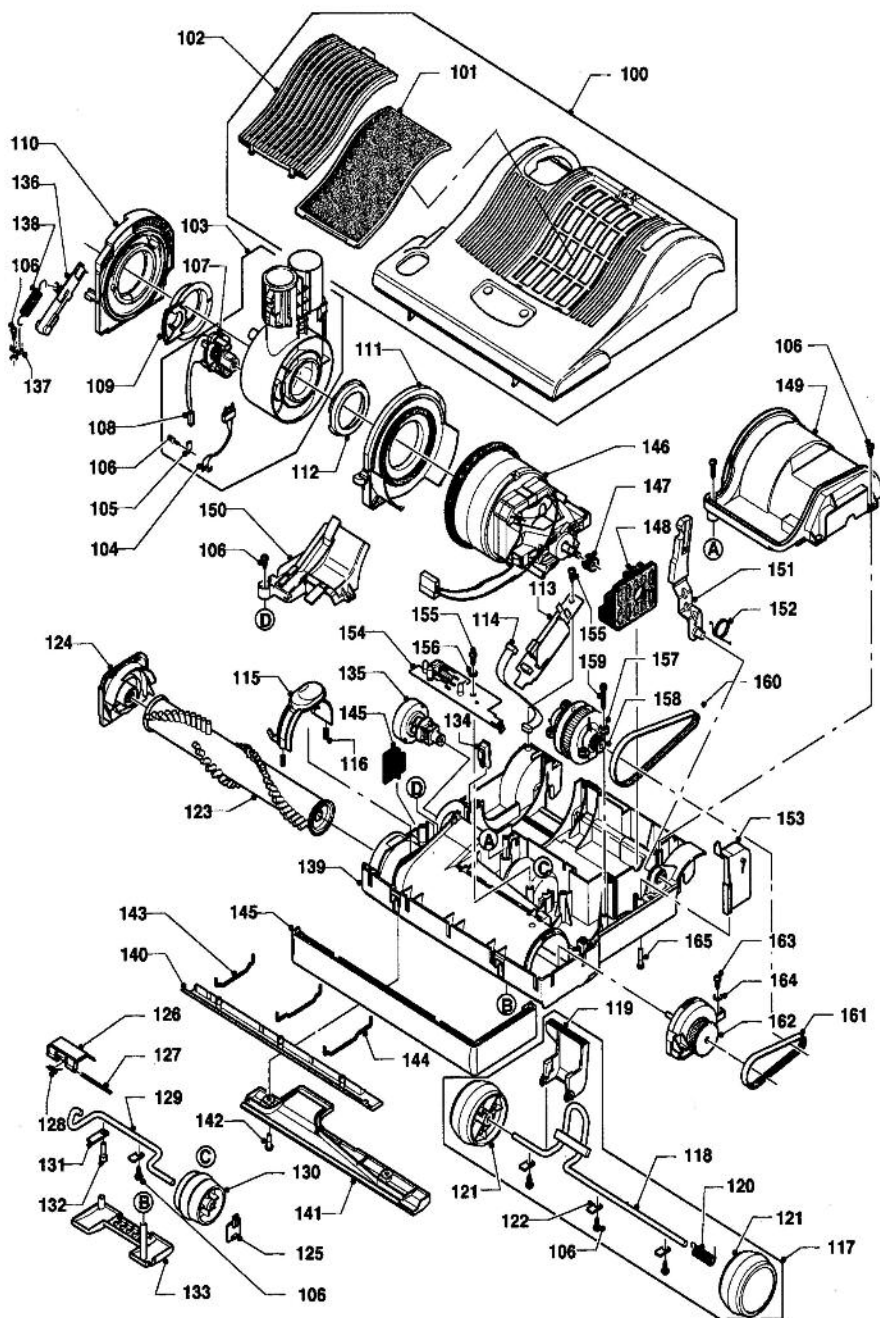

9591AT G1 Teal/Light Gray Machine


Pos.	Part #	Description
100	2831AT	Power head cover, complete - teal
101	2846	Exhaust filter
102	2820TK	Exhaust filter cover - teal
103	2823UL	Swivel neck assembly
104	2883	Male contact holder
105	2494	Cable clamp
106	0102	Screw F 3.9 x 13
107	2835	Bypass valve
108	0869	Internal cable
109	2825	Swivel neck bearing r.h.
110	2824	Swivel neck support r.h.
111	5479	Swivel neck support l.h.
112	5717	Swivel neck bearing l.h.
113	2890ER	PCB Power supply
114	0864	Internal Cable
115	5713TK	Brush roller release - teal
116	5103	Spring
117	5051HG	Axle assembly
118	5053	Axle
119	5059OR	Foot pedal - orange
120	2010	Axle spring
121	5819HG	Wheel, complete
122	2014	Axle clamp
123	5010AM	Brush roller
124	5031TK	Bearing block, r.h. - teal/light gray
125	2869HG	Brushing plate
126	2868OR	Access door (incl. pos. 127 & 128)
127	5303	Access door axle
128	5304	Access door spring
129	2861	Pile adjustment axle
130	5174HG	Pile adjustment wheel
131	2849	Axle clamp
132	01010	Screw AM4 x 16
133	2860HG	Cover
134	2833	Thrust member
135	2862HG	Pile adjustment knob
136	2834	Thrust member
137	2856	Clamp
138	2867	Spring
139	2821HG	Chassis, complete
140	5411HG	Front bottom plate, complete
141	2829HG	Rear bottom plate, complete (incl. pos. 142)
142	0197	Screw M4 x 12
143	5401	Wire tie
144	5402	Wire tie
145	5005HG	Bumper, set
146	5468	Motor 1300W / 120V
	05117S	Carbon brush set
147	5462	Vacuum motor pulley 2MR
148	5100	Rubber mounting
149	2826TK	Motor cover - teal
150	2839SW	Cover for air channel
151	5129	Support lever
152	5107-1	Support spring
153	5112SW	Motor pulley cover
154	2881ER	Computer controller
155	0107	Screw C 2.9 x 13
156	0143	Washer 3.2 DIN 125
157	5464	Sensor
158	5117/1	Sensor pulley
159	0104	Screw C 3.9 x 25
160	5463	Belt 2MR-310-6
161	5110	Belt 219 3M HTDII-6
162	5766HG	Bearing block l.h., complete
163	0103	Screw C 3.9 x 16
164	0140	Washer 4.3
165	0176TL	Screw AM4 x 30

#9591AM G1 Light Gray/Dark Gray Machine Exceptions

100	2831SE	Power head cover, complete - light gray/dark gray
102	2820DG	Exhaust filter cover - dark gray
115	5713DG	Brush roller release - dark gray
124	5031DG	Bearing Block, right hand - light gray/dark gray
149	2826	Motor cover

#9592AT G2 - Teal/Light Gray
 #9592AM G2 - Light Gray/Dark Gray

#9592AT G2 Teal/Light Gray Machine
 Pos. Part # Description

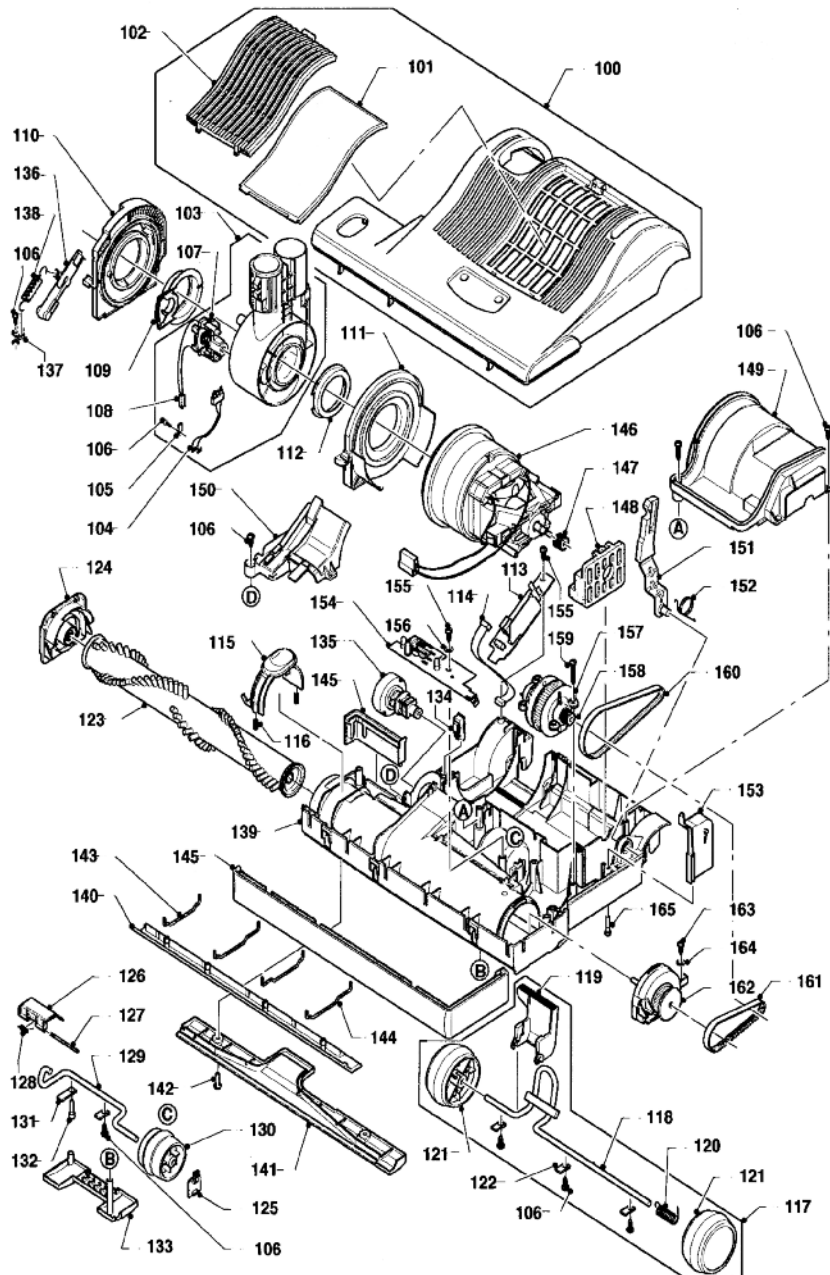

100	2832AT	Power head cover, complete - teal
101	2846	Exhaust filter
102	2820TK	Exhaust filter cover - teal
103	2823UL	Swivel neck assembly
104	2883	Male contact holder
105	2494	Cable clamp
106	0102	Screw F 3.9 x 13
107	2835	Bypass valve
108	0869	Internal cable
109	2825	Swivel neck bearing r.h.
110	2824	Swivel neck support r.h.
111	5479	Swivel neck support l.h.
112	5717	Swivel neck bearing l.h.
113	2890ER	PCB Power supply
114	0864	Internal Cable
115	2843TK	Brush roller release - teal
116	5103	Spring
117	5051HG	Axle assembly
118	5053	Axle
119	5059OR	Foot pedal - orange
120	2010	Axle spring
121	5819HG	Wheel, complete
122	2014	Axle clamp
123	2838AM	Brush roller
124	5031TK	Bearing block r.h. - teal/light gray
125	2869HG	Rubbing plate
126	2868OR	Access door (incl. pos. 127 & 128)
127	5303	Access door axle
128	5304	Access door spring
129	2861	Pile adjustment axle
130	5174HG	Pile adjustment wheel
131	2849	Axle clamp
132	01010	Screw AM4 x 16
133	2860HG	Cover
134	2833	Thrust member
135	2862HG	Pile adjustment knob
136	2834	Thrust member
137	2856	Clamp
138	2867	Spring
139	2822HG	Chassis, complete, G2
140	2828HG	Front bottom plate, complete
141	2830HG	Rear bottom plate, complete (incl. pos. 142)
142	0197	Screw M4 x 12
143	5401	Wire tie
144	5402	Wire tie
145	2842HG	Bumper, set
146	5468	Motor 1300W / 120V
147	05117S	Carbon brush set
148	5462	Vacuum motor pulley 2MR
149	5100	Rubber mounting
150	2826TK	Motor cover - teal
151	2839SW	Cover for air channel
152	5129	Support lever
153	5107-1	Support spring
154	5112SW	Motor pulley cover
155	2881ER	Computer controller
156	0107	Screw C 2.9 x 13
157	0143	Washer 3.2 DIN 125
158	5465	Sensor
159	5117/1	Sensor pulley
160	0104	Screw C 3.9 x 25
161	5463	Belt 2MR-310-6
162	5110	Belt 219 3M HTDII-6
163	5766HG	Bearing block l.h., complete
164	0103	Screw C 3.9 x 16
165	0140	Washer 4.3
166	0176TL	Screw AM4 x 30

SEBO VACUUM CLEANER WARRANTY

Five Years Non-Wear Parts - Five Years Motor - One Year Labor

1. Your authorized SEBO dealer or SEBO will provide the original product purchaser with replacement of Non-Wear Parts which fail due to a material or workmanship defect for a period of five (5) years from the original date of purchase of new product. SEBO America will provide a five (5) year warranty on suction motors and brush drive motors.
2. Your authorized SEBO dealer or SEBO will repair (or will cover labor charges associated with repair) a defective SEBO vacuum cleaner at no cost to the original purchaser, within one (1) year of original purchase of new product.
3. SEBO America or an authorized SEBO dealer must complete all warranty repairs.
4. To locate an authorized SEBO dealer in your area, or to register a warranty claim in the **United States of America, please visit our website at www.sebo.us.**
5. To locate an authorized SEBO dealer in your area, or to register a warranty claim in **Canada, please call Floor Care Equipment, Ltd. at (403) 250-5005.**
6. The warranties provided for above apply exclusively to SEBO Vacuum Cleaners which are used residentially. No warranty is provided for SEBO vacuum cleaners used commercially.
7. The Wear Parts excluded from warranty coverage include filter bags, micro-hygiene filters, exhaust filters, the cable (external cord), the attachment hose, the brush rollers, the front bottom plate, the rear bottom plate, the telescopic tube, the crevice nozzle, the upholstery nozzle, the dusting brush and all of the optional attachments. (See "Optional Attachments" on page 5 of this manual).
8. This warranty applies only while your SEBO Vacuum Cleaner is physically located within the United States of America and its territories or Canada.
9. The purchase receipt showing the date, price, and item of purchase is the initial document of proof of purchase and determines the validity of warranty. To be certain that your warranty claim can be processed as quickly and efficiently as possible, please retain your original purchase receipt and mail in the warranty card provided with your new SEBO vacuum cleaner. You may also register on our website at www.sebo.us.
10. This warranty gives you specific legal rights. You may also have other legal rights, which vary from state/province to state/province.
11. SEBO America will not process nor will it accept responsibility for warranty claims for machines purchased from dealers located in Canada. Floor Care Equipment, Ltd. will not process nor will it accept responsibility for warranty claims for machines purchased from dealers located in the United States.

EXCLUSIVE REMEDY: The remedies provided under the terms of this Warranty are the purchaser's exclusive remedies and are in lieu of any other remedies otherwise available.

THE WARRANTY DOES NOT COVER:

- Used or secondhand products.
- Products outside of the warranty period.
- Items not manufactured by SEBO.
- Normal maintenance service.
- Equipment damaged by improper use, accident, other casualty or negligence.
- Machines equipped with nonauthorized attachments or modifications.
- Machines on which the serial number has been altered or removed.

LIMITATIONS AND EXCLUSIONS:

SEBO MAKES NO OTHER REPRESENTATIONS OR WARRANTIES, EXPRESSED OR IMPLIED AND SPECIFICALLY EXCLUDES THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

SEBO WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE.

THIS DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO THE EXTENT SAID DISCLAIMER IS NOT ALLOWED BY APPLICABLE STATE/PROVINCIAL LAW.

To contact SEBO in the United States of America:

SEBO America, LLC
Telephone: (800) 334-6614 • (303) 792-9181
Fax: (303) 792-9196
Website: www.sebo.us

To contact SEBO in Canada:

Floor Care Equipment, Ltd.
Telephone: (800) 661-8687 • (403) 250-5005
Fax: (403) 250-5057
Website: www.sebocanada.ca



MADE IN GERMANY